

How to Access to the Fuel Tank and Sending Unit Door



Option 1 Instructions

Step 1 Unfasten the 6 bolts on the lower drawer. 5 of the 6 bolts will have speed clips which are attached underneath the cargo floor with adhesive to make re-installation easier. The 6th bolt that is located closest to the sending unit is installed with a nutsert, to make re-installation easier.


Step 2 Lift the front end of the lower drawer up and slightly to the left so that the side of the lower drawer does not hit the white support bar of the feed frame.

Step 3 Attach the 2 hooks to the right and left sides of the bottom of the lower drawer mount and the landing zone bars, to gain access to the fuel sending unit cover. (Securely fasten the hooks, to prevent them from slipping off and causing injury.) The rear of the lower drawer will still be resting on the cargo floor. With the front end of the lower drawer elevated, you will have a clearance of approximately 13 inches from the cargo floor to the elevated lower drawer. Providing the sending unit cover was prepared as the Stowage and Retrieval Installation Manual described, it should be simple to remove.

Step 4 After servicing the fuel sending unit, re-apply an adhesive or silicone onto the loose speed clips. (The Stowage and Retrieval Installation Manual can be used as a reference.) Repeat steps 2 and 1.

Sending Unit Hanger 55502600

If you have any questions or concerns, please call our office at 1-800-229-4500, or visit us online at www.postalproducts.com/stowage. These instructions will be available on our website, as well as a demonstration video.

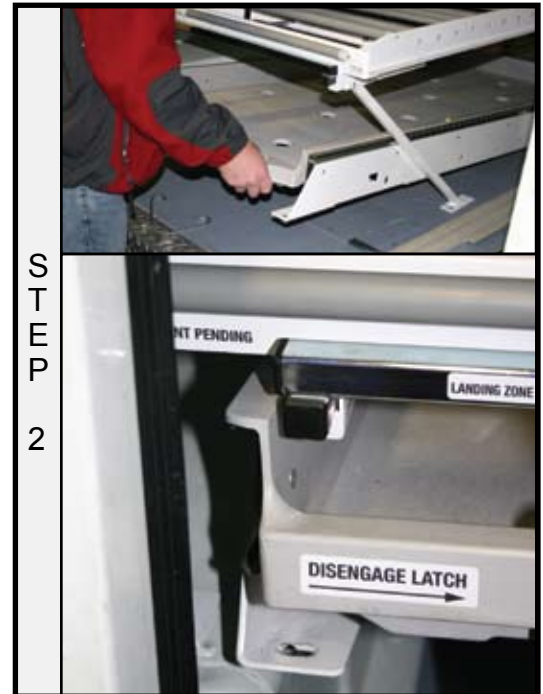

How to Access to the Fuel Tank and Sending Unit Door



Option 2 Instructions

- Step 1** Complete Step 1, in option 1.
- Step 2** Have a second technician aid in removing the complete lower drawer out of the stowage system.
- Step 3** After servicing the fuel sending unit, re-apply an adhesive or silicone onto the loose speed clips. (The Stowage and Retrieval Installation Manual can be used as a reference.) Re-install the lower drawer.
- Step 4** Tighten the bolts on the left side of the lower drawer first. Be sure that the right and left sides of the lower drawer are parallel. (The Stowage and Retrieval Installation Manual can be used as a reference.)
- Step 5** Tighten the bolts on the right side of the drawer.

Sending Unit Hanger 55502600

If you have any questions or concerns, please call our office at 1-800-229-4500, or visit us online at www.postalproducts.com/stowage. These instructions will be available on our website, as well as a demonstration video.

